


TESS-W4C v2 Mounting recommendations.

It is convenient to place the photometer in an accessible place that allows inspection and cleaning.


The chosen location should be away from walls or surfaces that may reflect nearby light sources.

Flat surface mounting:

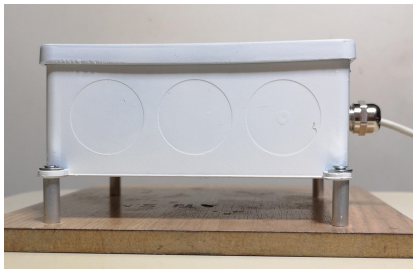

Never cover the two small bottom ventilation holes. Use spacers or similar of at least 10mm. If there is no separation, water will enter the photometer.

Mast mounting.

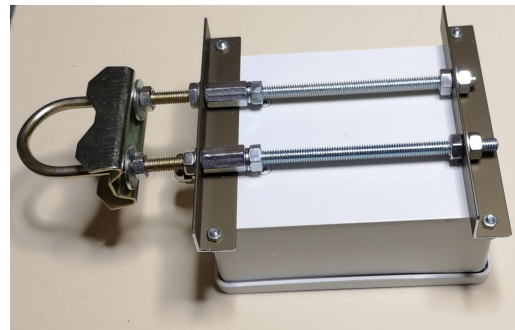

Parts for mast mounting:

Custom drilled aluminium profile.

M3 nut & 10mm screws: 4

Mast clamp: 1

100mm M6 screws: 2

M6 nuts: 8

M6 extension nut: 2

6mm washers: 8